

Load Isolation Switch UKP Installation Way

负荷隔离开关UKP安装形式

UKP0/L1



表面安装
总开关、维修开关
UKP0
10, 16, 20A
Surface installation
Main switch and maintenance
switch UKP0
10, 16, 20A

UKPN0/L2



表面安装
总开关、维修开关
UKPN0
10, 16, 20A
Surface installation
Main switch and maintenance
switch UKPN0
10, 16, 20A

UKP1/L2



表面安装
总开关、维修开关
UKP1
20, 25, 32A
Surface installation
Main switch and maintenance
switch UKP1
20, 25, 32A

UKPN1/L2



表面安装
总开关、维修开关
UKPN1
20, 25, 32A
Surface installation
Main switch and maintenance
switch UKPN1
20, 25, 32A

UKP3/L3



表面安装
总开关、维修开关
UKP3
32, 40, 50, 63A
Surface installation
Main switch and maintenance
switch UKP3
32, 40, 50, 63A

UKPN3/L3



表面安装
总开关、维修开关
UKPN3
32, 40, 50, 63A
Surface installation
Main switch and maintenance
switch UKPN3
32, 40, 50, 63A

UKP5/L5



表面安装
总开关、维修开关
UKP5
63, 80, 100, 125, 150A
Surface installation
Main switch and maintenance
switch UKP5
63, 80, 100, 125, 150A

UKPN5/L5



表面安装
总开关、维修开关
UKPN5
63, 80, 100, 125, 150A
Surface installation
Main switch and maintenance
switch UKPN5
63, 80, 100, 125, 150A


Load Isolation Switch UKP Installation Way

负荷隔离开关UKP安装形式


UKPW0



表面安装
总开关、维修开关
UKPW0
10, 16, 20A
Surface installation
Main switch and maintenance
switch UKPW1
10, 16, 20A

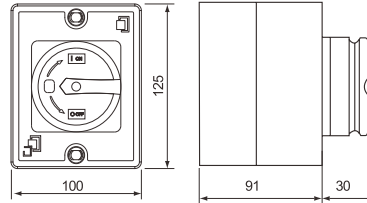

表面安装
Surface installation

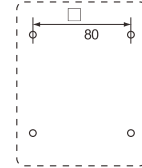


开孔尺寸
Hole size


UKPW1



表面安装
总开关、维修开关
UKPW1
20, 25, 32A
Surface installation
Main switch and maintenance
switch UKPW1
20, 25, 32A

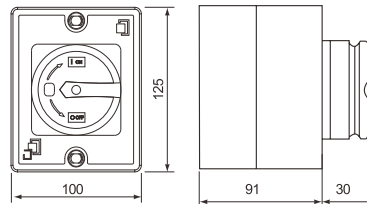

表面安装
Surface installation

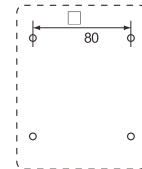


开孔尺寸
Hole size


UKPW3



表面安装
总开关、维修开关
UKPW3
32, 40, 50, 63A
Surface installation
Main switch and maintenance
switch UKPW3
32, 40, 50, 63A

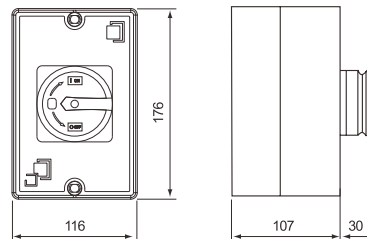

表面安装
Surface installation

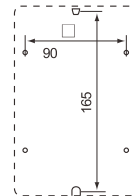


开孔尺寸
Hole size


UKPW5



表面安装
总开关、维修开关
UKPW5
63, 80, 100, 125, 150A
Surface installation
Main switch and maintenance
switch UKPW5
63, 80, 100, 125, 150A

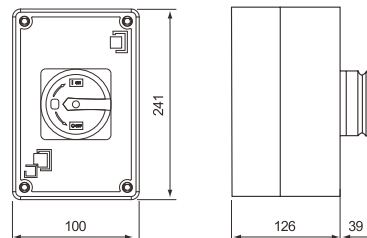

表面安装
Surface installation

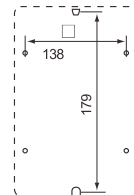

开孔尺寸
Hole size

Load Isolation Switch UKP Installation Way

负荷隔离开关UKP安装形式

UKP0/EA/SVB



通-断开关UKP0.../EA/SVB
平齐安装式
10, 16, 20A

On-off switch UKP0.../EA/SVB
parallel and level installation
10, 16, 20A

UKP0/I/SVB



通-断开关UKP0.../I/SVB
后部安装
10, 16, 20A

On-off switch UKP0.../I/SVB
Rear installation
10, 16, 20A

UKP1/EA/SVB



通-断开关UKP1.../EA/SVB
平齐安装式
20, 25, 32A

On-off switch UKP1.../EA/SVB
parallel and level installation
20, 25, 32A

UKP1/I/SVB



通-断开关UKP1.../I/SVB
后部安装
20, 25, 32A

On-off switch UKP1.../I/SVB
Rear installation
20, 25, 32A

UKP3/EA/SVB



通-断开关UKP3.../EA/SVB
平齐安装式
32, 40, 50, 63A

On-off switch UKP3.../EA/SVB
parallel and level installation
32, 40, 50, 63A

UKP3/I/SVB



通-断开关UKP3.../I/SVB
后部安装
32, 40, 50, 63A

On-off switch UKP3.../I/SVB
Rear installation
32, 40, 50, 63A

UKP5/EA/SVB



通-断开关UKP5.../EA/SVB
平齐安装式
63, 80, 100A

On-off switch UKP5.../EA/SVB
parallel and level installation
63, 80, 100A

UKP5/I/SVB



通-断开关UKP5.../I/SVB
后部安装
63, 80, 100, 125, 150A

On-off switch UKP5.../I/SVB
Rear installation
63, 80, 100, 125, 150A

Load Isolation Switch UKP Installation Way

负荷隔离开关UKP安装形式

UKP0/ZAV



通-断开关UKP0.../ZAV
后部安装（柜外操作）
10, 16, 20A

On-off switch UKP0.../ZAV
Screw Fasten To the Switch Base
10, 16, 20A

UKP3/ZAV



通-断开关UKP3.../ZAV
后部安装（柜外操作）
32, 40, 50, 63A

On-off switch UKP3.../ZAV
Screw Fasten To the Switch Base
32, 40, 50, 63A

UKP1/ZAV



通-断开关UKP1.../ZAV
后部安装（柜外操作）
20, 25, 32A

On-off switch UKP1.../ZAV
Screw Fasten To the Switch Base
20, 25, 32A

UKP5/ZAV




通-断开关UKP5.../ZAV
后部安装（柜外操作）
63, 80, 100, 125, 150A

On-off switch UKP5.../ZAV
Screw Fasten To the Switch Base
63, 80, 100, 125, 150A

Load Isolation Switch UKP Installation Way

负荷隔离开关UKP安装形式

UKP0/IVS

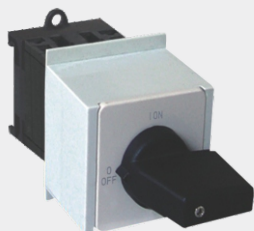

通-断开关UKP0.../IVS

配电柜安装
10, 16, 20A

On-off switch UKP0.../IVS
Distribution Cabinet Installation
10, 16, 20A

UKP0/Z



通-断开关UKP0.../Z

后部安装
10, 16, 20A

On-off switch UKP0.../Z
Rear installation
10, 16, 20A

UKP1/IVS



通-断开关UKP1.../IVS

配电柜安装
20, 25, 32A

On-off switch UKP 1.../IVS
Distribution Cabinet Installation
20, 25, 32A

UKP1/Z



通-断开关UKP1.../Z

后部安装
20, 25, 32A

On-off switch UKP1.../Z
Rear installation
20, 25, 32A

UKP3/IVS



通-断开关UKP3.../IVS

配电柜安装
32, 40, 50, 63A

On-off switch UKP3.../IVS
Distribution Cabinet Installation
32, 40, 50, 63A

UKP3/Z



通-断开关UKP3.../Z

后部安装
32, 40, 50, 63A

On-off switch UKP3.../Z
Rear installation
32, 40, 50, 63A

UKP5/IVS



通-断开关UKP5.../IVS

配电柜安装
63, 80, 100A

On-off switch UKP5.../IVS
Distribution Cabinet Installation
63, 80, 100A

UKP5/Z



通-断开关UKP5.../Z

后部安装
63, 80, 100, 125, 150A

On-off switch UKP5.../Z
Rear installation
63, 80, 100, 125, 150A