

Cam Switch UKT Installation Way

凸轮开关UKT安装形式

UKT0/L2



表面安装
转换UKT0
10, 16, 20A

Surface installation
Transfer UKT0
10, 16, 20A

UKTN0/L2



表面安装
转换UKTN0
10, 16, 20A

Surface installation
Transfer UKT0
10, 16, 20A

UKT3/L3



表面安装
转换UKT3
20, 32, 40A

Surface installation
Transfer UKT3
20, 32, 40A

UKTN3/L3



表面安装
转换UKTN3
20, 32, 40A

Surface installation
Transfer UKT3
20, 32, 40A

UKT5/L5



表面安装
转换UKT5
63, 80, 100A

Surface installation
Transfer UKT5
63, 80, 100A

UKTN5/L5



表面安装
转换UKTN5
63, 80, 100A

Surface installation
Transfer UKT5
63, 80, 100A

Cam Switch UKT Installation Way

凸轮开关UKT安装形式

UKT0/E



转换开关UKT0.../E
平齐安装式
10, 16, 20A

Transfer switch UKT0.../E
parallel and level installation
10, 16, 20A

UKT0/IVS



用于二个旋转方向
星-三角开关UKT0.../IVS
配电柜安装
10, 16, 20A

Used for two rotation directions
Star-delta switch UKT0.../IVS
Distribution Cabinet Installation
10, 16, 20A

UKT3/E



转换开关UKT3.../E
平齐安装式
25, 32, 40A

Transfer switch UKT3.../E
parallel and level installation
25, 32, 40A

UKT0/IVS



用于二个旋转方向
星-三角开关UKT0.../IVS
配电柜安装
25, 32, 40A

Used for two rotation directions
Star-delta switch UKT0.../IVS
Distribution Cabinet Installation
25, 32, 40A

UKT0/E



转换开关UKT0.../E
平齐安装式
10, 16, 20A

Transfer switch UKT0.../E
parallel and level installation
10, 16, 20A

UKT0/Z



双向弹簧复位至0 UKT0.../Z
后部安装
10, 16, 20A

Double-acting spring resets to 0
UKT0.../Z
Rear installation
10, 16, 20A

UKT3/E



转换开关UKT3.../E
平齐安装式
25, 32, 40A

Transfer switch UKT3.../E
parallel and level installation
25, 32, 40A

UKT0/EZ



步进开关 UKT0.../EZ
后部安装
10, 16, 20A

Stepping switch UKT0.../EZ
Rear installation
10, 16, 20A

Cam Switch UKT Installation Way

凸轮开关UKT安装形式

UKT0/E



双向360°旋转 UKT0.../E
平齐安装式
10, 16, 20A

Bi-direction rotating in 360°
Measure current UKT0.../E
parallel and level installation
10, 16, 20A

UKT0/EZ



双向360°旋转 UKT0.../EZ
后部安装
10, 16, 20A

Bi-direction rotating in 360°
Measure current UKT0.../EZ
Rear installation
10, 16, 20A

UKT3/E



多速开关UKT3.../E
平齐安装式
25, 32, 40A

Multi-speed switch UKT3.../E
parallel and level installation
25, 32, 40A

UKT3/EZ



从手动位置(START)弹簧复位
至手动位置(HAND) UKT3.../EZ
后部安装
25, 32, 40A

The spring resets to HAND position
from START position UKT3.../EZ
Rear installation
25, 32, 40A

UKT0/E



多速开关UKT0.../E
平齐安装式
10, 16, 20A

Multi-speed switch UKT0.../E
parallel and level installation
10, 16, 20A

UKT0/EZ



电压表选择开关 UKT0.../EZ
后部安装
10, 16, 20A

Voltmeter selector switch UKT0.../EZ
Rear installation
10, 16, 20A

UKT5



星-三角开关UKT5
63, 80, 100A

Star-delta switch UKT5
63, 80, 100A

UKT5



换向开关UKT5
63, 80, 100A

Commutation switch UKT5
63, 80, 100A

Cam Switch UKT Installation Way

凸轮开关UKT安装形式

UKT0/E



双向360°旋转 UKT0.../E
平齐安装式
10, 16, 20A

Bi-direction rotating in 360°
Measure current UKT0.../E
parallel and level installation
10, 16, 20A

UKT0/E



手动/自动开关 UKT0.../E
平齐安装式
10, 16, 20A

Manual/auto switch UKT0.../E
parallel and level installation
10, 16, 20A

UKT3/E



从手动位置(HAND)弹簧复位
至0 UKT3.../E
平齐安装式
25, 32, 40A

The spring resets to 0 from
HAND position UKT3.../E
parallel and level installation
25, 32, 40A

UKT5ZAV



换向开关UKT5...ZAV
63, 80, 100A

Commutation switch
UKT5...ZAV
63, 80, 100A

UKT0/IVS



转换开关UKT0.../IVS
配电柜安装
10, 16, 20A

Transfer switch UKT0.../IVS
Distribution Cabinet Installation
10, 16, 20A

UKT0/EZ



转换开关UKT0.../EZ
后部安装
10, 16, 20A

Transfer switch UKT0.../EZ
Rear installation
10, 16, 20A

UKT3/IVS



转换开关UKT3.../IVS
配电柜安装
25, 32, 40A

Transfer switch UKT3.../IVS
Distribution Cabinet Installation
25, 32, 40A

UKT3/EZ



转换开关UKT3.../EZ
后部安装
25, 32, 40A

Transfer switch UKT3.../EZ
Rear installation
25, 32, 40A

Mian spare parts and accessories of Cam switch UKT /Load Isolating switch UKP

凸轮开关UKT/负荷隔离开关UKP 主要备件和附件


说明 Description	应用于 Application	型号 Model
-------------------	--------------------	-------------



总开关手柄装置 Main switch handle

UKT0最多8个触点 T0 is provided with 8 contacts at most.
UKT3最多12个触点 T3 is provided with 12 contacts at most.

红色手柄加黄色锁圈,0位可加挂锁 With red handle and yellow locking ring, it can be equipped with padlock in the position 0.	UKT0-.../E, .../Z, .../I1 UKT3-.../E, .../Z, .../I2 UKP1-.../E, .../Z, .../I2 UKT5-.../E, .../Z, .../I4 UKP5-63/E, .../Z, .../I4 UKP5-1000/E, .../Z, .../I5	SVB-UKT0 SVB-UKP3
黑色手柄加黑色锁圈,0位或I位可加挂锁 With black handle and black locking ring, it can be equipped with padlock in the position 0 or 1.	UKT0-.../E, .../Z, .../I1 UKT3-.../E, .../Z, .../I2 UKP1-.../E, .../Z, .../I2 UKT5-.../E, .../Z, .../I4 UKP5-63/E, .../Z, .../I4 UKP5-1000/E, .../Z, .../I5	SVB-SW-UKT0 SVB-SW-UKP3

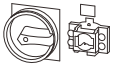

总开关手柄装置 Main switch handle

带PE接线端和N接线端 With PE connecting terminal and N connecting terminal

用于转换安装形式: For transferring the installation way

1) 平齐安装开关T.../E→后部安装式总开关UKT.../EA/SVB(带徽牌FS908)

Parallel and level installation type switch T.../E→Parallel and level installation type main switch.../EA/SVB (with emblem FS908)

2) 后部安装开关T.../Z→后部安装式总开关UKT.../V/SVB(带徽牌FS908)

Rear installation type switch T.../Z→Rear installation type main switch.../V/SVB (with emblem FS908)

红色手柄加黄色锁圈,可加挂锁 With red handle and yellow locking ring, it can be equipped with padlock	UKT0-.../E, .../Z UKT3-.../E, .../Z UKT5-.../E.../Z	V/EA/SVB-UKT0 V/EA/SVB-UKT5
黑色手柄加黑色锁圈,可加挂锁 With black handle and black locking ring, it can be equipped with padlock	UKT0-.../E, .../Z UKT3-.../E, .../Z UKT5-.../E.../Z	V/EA/SVB-SW-UKT0 V/EA/SVB-SW-UKT5



拇指操作手柄 Thumb handle

红Red	UKT0-.../E, .../IVS, .../Z, .../I1 UKT3-.../E, .../IVS, .../Z, .../I2 UKP1-.../E, .../IVS, .../Z, .../I2	KNB-RT-UKT0
黑Black	UKT0-.../E, .../EZ, .../IVS, .../Z, .../I1 UKT3-.../E, .../EZ, .../IVS, .../Z, .../I2 UKP1-.../E, .../EZ, .../IVS, .../Z, .../I2	KNB-UKT0



红Red	UKT5-.../E, .../Z, .../I4 UKP5-63/E, .../Z, .../I4 UKP5-100/E, .../Z, .../I5	KNB-RT-UKP5
黑Black	UKT5-.../E, .../Z, .../I4 UKP5-63/E, .../Z, .../I4 UKP5-100/E, .../Z, .../I5	KNB-UKP5

说明 Description	应用于 Application	型号 Model
-------------------	--------------------	-------------

 
N极模块N pole module

N-UKP1的分断容量=UKP1-32触点的分断容量

N-UKP1 opening capacity= UKP1-32 contact opening capacity

N-UKP5的分断容量=UKP1-100触点的分断容量

N-UKP13 opening capacity= UKP1-100 contact opening capacity



UKP1-.../E, .../EA, .../EZ	N-UKP1E
UKP1-.../Z, .../V, .../I2, .../ST, .../IVS	N-UKP1Z
UKP5-.../E, .../EA...	N-UKP3E
UKP5-.../Z, .../V, .../IVS	N-UKP3Z
UKP5-63/E, .../Z, .../I4, .../ST	
UKP5-100/E, .../Z, .../I5, .../ST	

辅助触点模块 Auxiliary contact module

1常开+1常闭触点 1 NO contact + 1 NC contact




UKP1-.../E, .../EA, .../EZ	+Hi11-UKP1/
UKP3-.../E, .../EA	UKP5E
UKP5-.../E, .../EA	+Hi11-UKP1/
UKP1-.../Z, .../V, .../I2, .../ST, .../IVS	UKP5Z
UKP5-63/E, .../Z, .../I4, .../ST, .../IVS	
UKP5-100/E, .../Z, .../I5, .../ST, .../IVS	


护罩Shield

用于平齐安装式开关, 最多8个触点

It is used for parallel and level installation type switch, has 8 contacts at most.

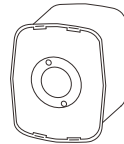

UKT0-.../E	UKP3-.../E	H3-UKT0
UKT3-.../E	UKP5-.../E	
UKP1-.../E		

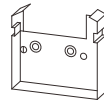

接线端子护罩最我4个触点
Shield of connection terminal has 4 contacts at most


UKT5-.../E, .../Z	H1-UKT5
-------------------	---------

护罩H1-T5扩展6~16个触点
Extension of shield H1~T5 6~16 contacts

H1-UKT5	HZ-UKT5
---------	---------

3极负荷隔离开关P的接线端子护罩
Shield of connection terminal of 3-pole load isolation switch P

UKP1-.../E, .../Z, .../I2, .../EA, .../V	H-UKP1
--	--------

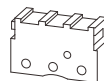

UKP1-...N, ...HI11, ...N, ...HI11	H-UKP14
-----------------------------------	---------

注: 单独订货时: 按照IEC/EN60204, 红色手柄公用于急停开关, 并且须订购相应的黄色徽牌FS908GE-UKT0/FS908GE-UKP3。

Note: when ordering separately According to IEC/EN 60204, the red handle is only for emergency stop switch, besides, user must order the corresponding yellow emblem FS908GE-UKT0/FS908GE-UKP3;

说明: 1、N极模块和辅助触点模块可左侧或右侧安装于三极负荷隔离开关UKP上: 对UKP1-.../I2, 只能安装于其左侧。

2、1个触点单元=2个触点


Note: 1. N pole module and auxiliary contact module are installed on the left or right of 3-pole load isolation switch UKP, UKP1-.../I2 is only installed on the left.

2. 1 contact unit = 2 contacts


Mounting Size

安装尺寸

UKP0.../L1...
UKT0.../L1...

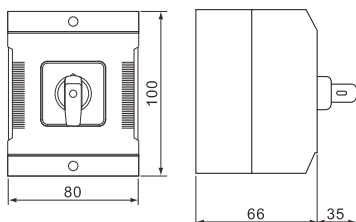


表面安装
Surface installation

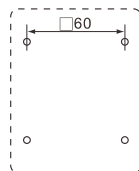


开孔尺寸
Hole size

UKP0.../L1...
UKT0.../L1...

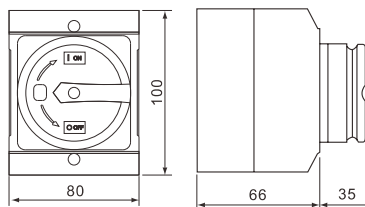


表面安装
Surface installation

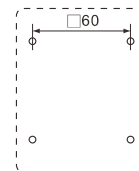


开孔尺寸
Hole size

UKP1.../L2...
UKT0.../L2...

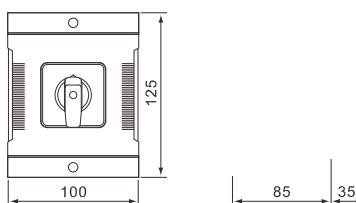


表面安装
Surface installation

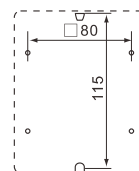


开孔尺寸
Hole size

UKP1.../L2...
UKT0.../L2...

UKPN0.../L2... UKTN0.../L2...
UKPN1.../L2...

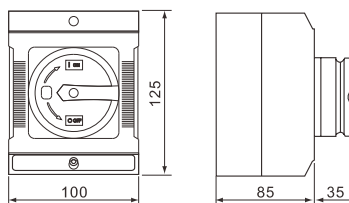


表面安装
Surface installation

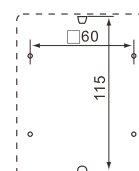


开孔尺寸
Hole size

UKP3.../L3...
UKT3.../L3...

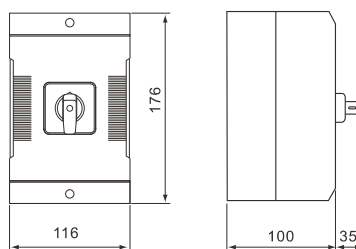


表面安装
Surface installation

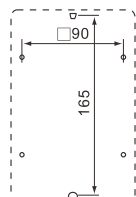


开孔尺寸
Hole size

UKP3.../L3...
UKT3.../L3...

UKPN3.../L3... UKTN3.../L3...

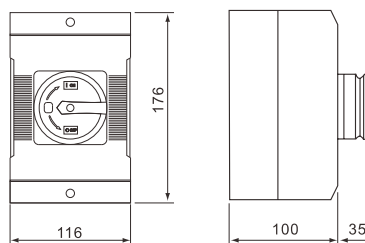


表面安装
Surface installation

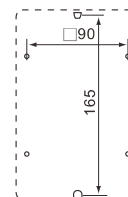


开孔尺寸
Hole size

UKP5.../L4...
UKT5.../L4...

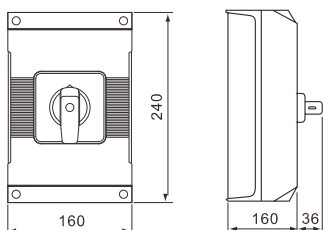


表面安装
Surface installation

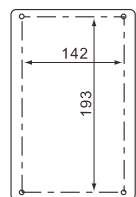


开孔尺寸
Hole size

UKP5.../L4...
UKT5.../L4...

UKPN5.../L4... UKTN5.../L4...

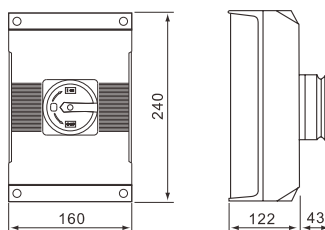

表面安装
Surface installation

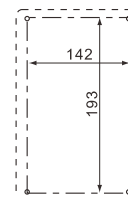


开孔尺寸
Hole size


Mounting Size

安装尺寸


UKP0
UKP1

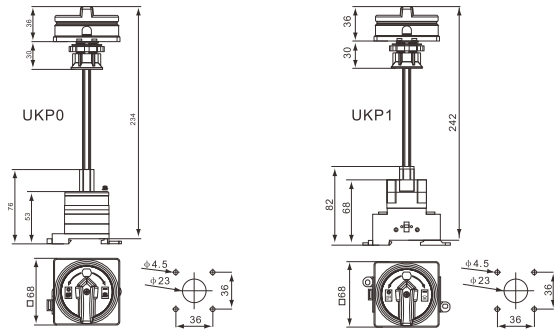

UKP3
UKP5

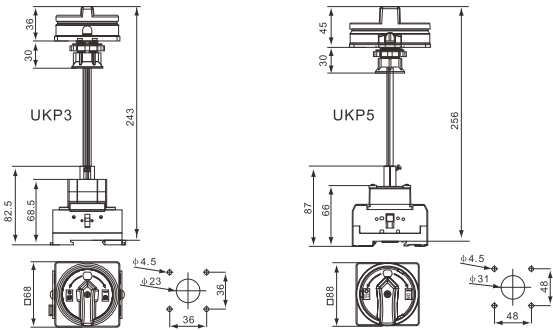


UKT0.../E (+H3-UKT0)
UKT3.../E (+H3-UKT0)

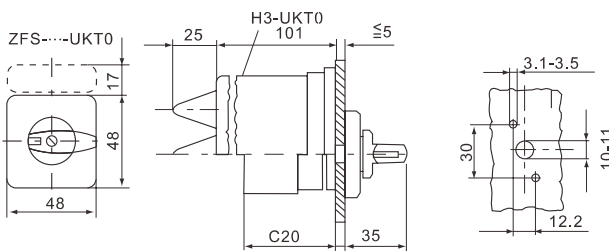

平齐安装
Parallel and level installation

开孔尺寸
Hole size


UKT0.../EA/SVB
UKT3.../EA/SVB

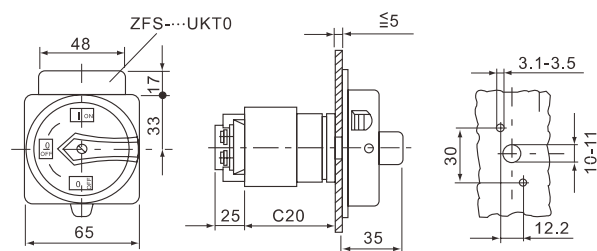

平齐安装式总开关
Parallel and level installation
type main switch


门开孔尺寸
Door hole size

UKT5.../E

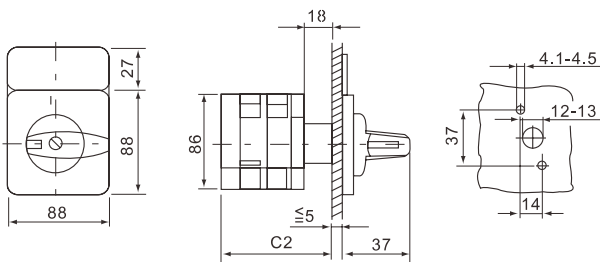

平齐安装
Parallel and level installation

UKT5.../EA/SVB

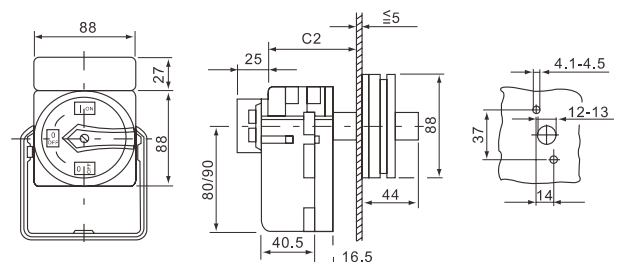

平齐安装式总开关
Parallel and level installation
type main switch

门开孔尺寸
Door hole size

型号 Model	C20	型号 Model	C2
UKT0-1...	41	UKT5-1...	54
UKT0-2...	50	UKT5-2...	71
UKT0-3...	80	UKT5-3...	87
UKT0-4...	69	UKT5-4...	104
UKT0-5...	79	UKT5-5...	120
UKT0-6...	88	UKT5-6...	137
UKT0-7...	98	UKT5-7...	153
UKT0-8...	107	UKT5-8...	170
UKT0-9...	117	UKT5-9...	186
UKT0-10...	126	UKT5-10...	203
UKT0-11...	136		